


SIKALASTIC/EMCRETE INTEGRATION STEPS:

- PRE-LEVEL LOOSE-LAID PLATES ACCORDING TO SJS INSTALLATION INSTRUCTIONS
- SOLVENT (ACETONE) WIPE EMCRETE (IF LONGER THAN 4 HOURS AFTER PLACEMENT OF EMCRETE: LIGHTLY GRIND THE TOP OF EMCRETE, THEN SOLVENT WIPE)
- PRIME WITH SIKALASTIC PRIMER
- APPLY SIKALASTIC BASE COAT
- APPLY SIKALASTIC TOP COAT
- ALLOW TO FULLY CURE (72 HOURS MIN.)
- INSTALL THE PLATES

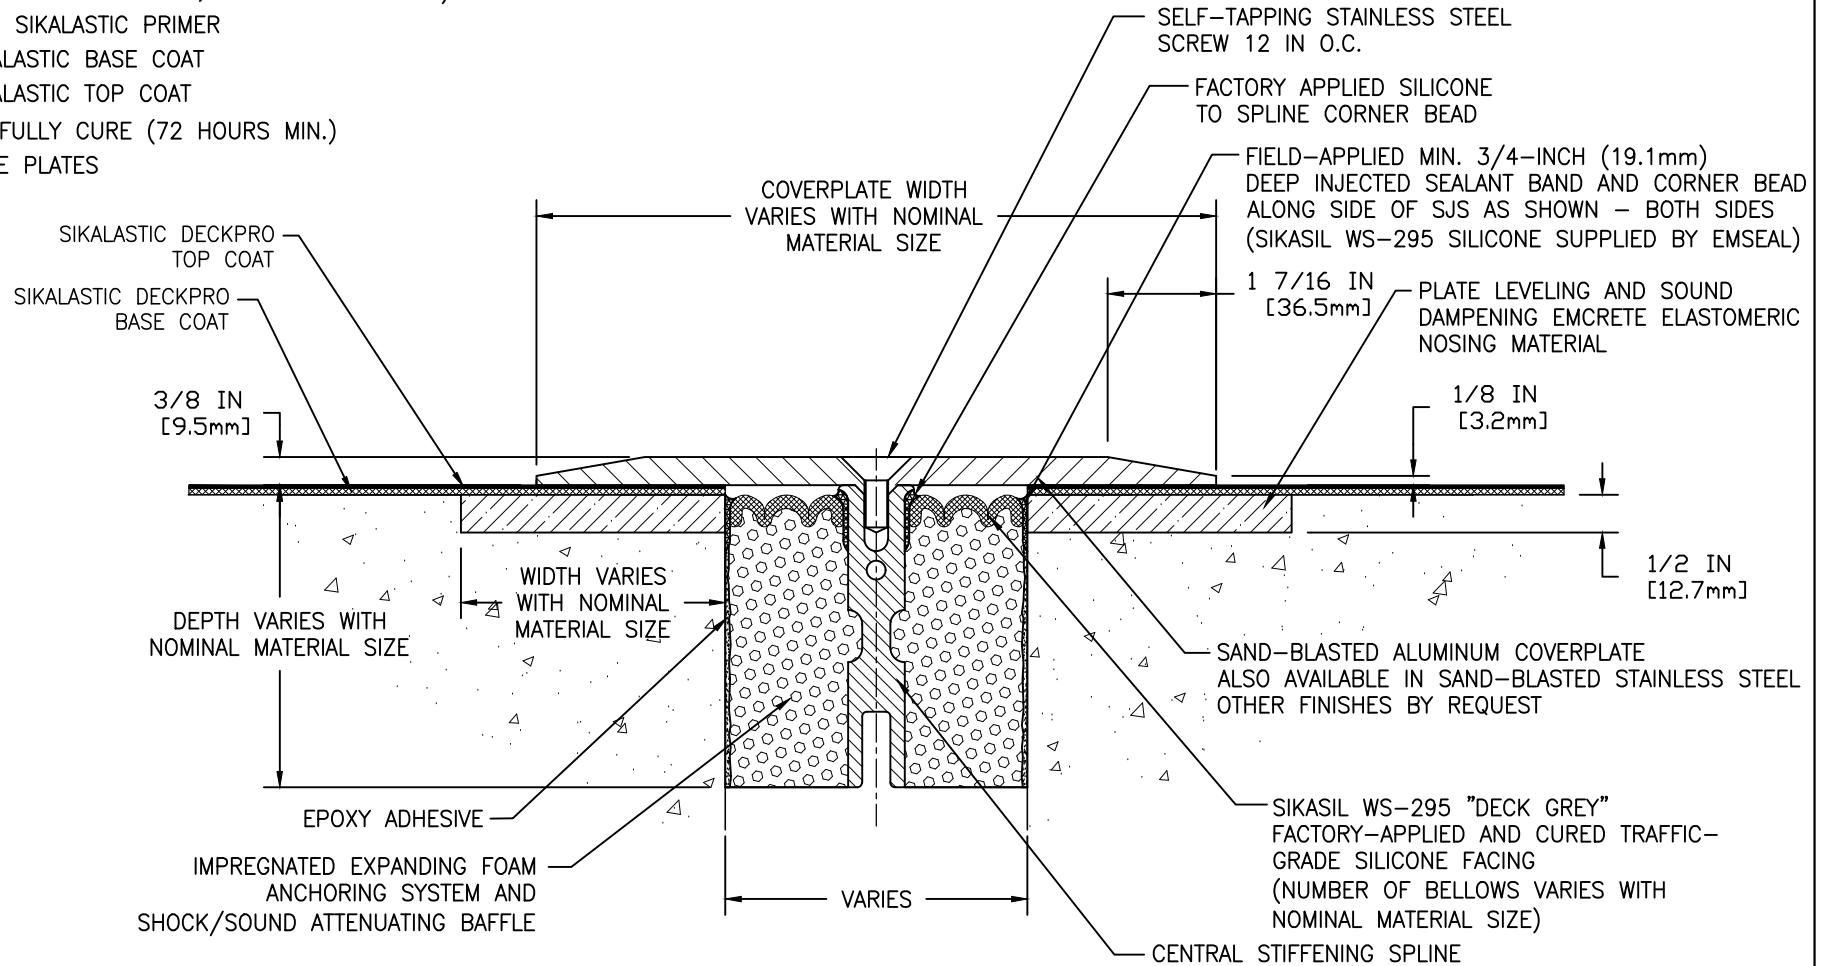

NOTE: 3/8 IN (9.5mm) COVERPLATES FOR VEHICLE AND PEDESTRIAN-TRAFFIC USE  
(FOR PEDESTRIAN-TRAFFIC ONLY, USE 1/4 IN (6.4mm) COVERPLATE)

MOVEMENT: ±50% (TOTAL 100%) OF NOMINAL MATERIAL SIZE



A SIKA COMPANY

**BUILDING TRUST**



## EMSEAL/SIKA SOLE SOURCE

SJS - DECK TO DECK W/EMCRETE - WITH SIKALASTIC DECKPRO

THIS DOCUMENT CONTAINS INFORMATION OF A CONFIDENTIAL NATURE AND IS PROPRIETARY TO EMSEAL JOINT SYSTEMS LTD. ANY UNAUTHORIZED USE WILL BE PROSECUTED. THIS DRAWING IS PROTECTED BY COPYRIGHT, THE RIGHT TO REPRODUCE IN ANY FORM BEING THE EXCLUSIVE RIGHT OF EMSEAL JOINT SYSTEMS LTD. ANY UNAUTHORIZED REPRODUCTION WHETHER IN TWO OR THREE DIMENSIONS WILL BE PROSECUTED. © 2014 EMSEAL JOINT SYSTEMS LTD.

DRAWN BY: <b>PMG</b>	DATE: <b>2019/02/12</b>	SCALE: <b>N.T.S.</b>	SHEET No: <b>1 OF 1</b>
PART NUMBER:			<b>SES-008</b>

SES-008