


SIKALASTIC/EMCRETE INTEGRATION STEPS:

- SOLVENT (ACETONE) WIPE EMCRETE (IF LONGER THAN 4 HOURS AFTER PLACEMENT OF EMCRETE: LIGHTLY GRIND THE TOP OF EMCRETE, THEN SOLVENT WIPE)
- PRIME WITH SIKALASTIC PRIMER
- APPLY SIKALASTIC BASE COAT
- APPLY SIKALASTIC TOP COAT
- ALLOW TO FULLY CURE (72 HOURS MIN.)

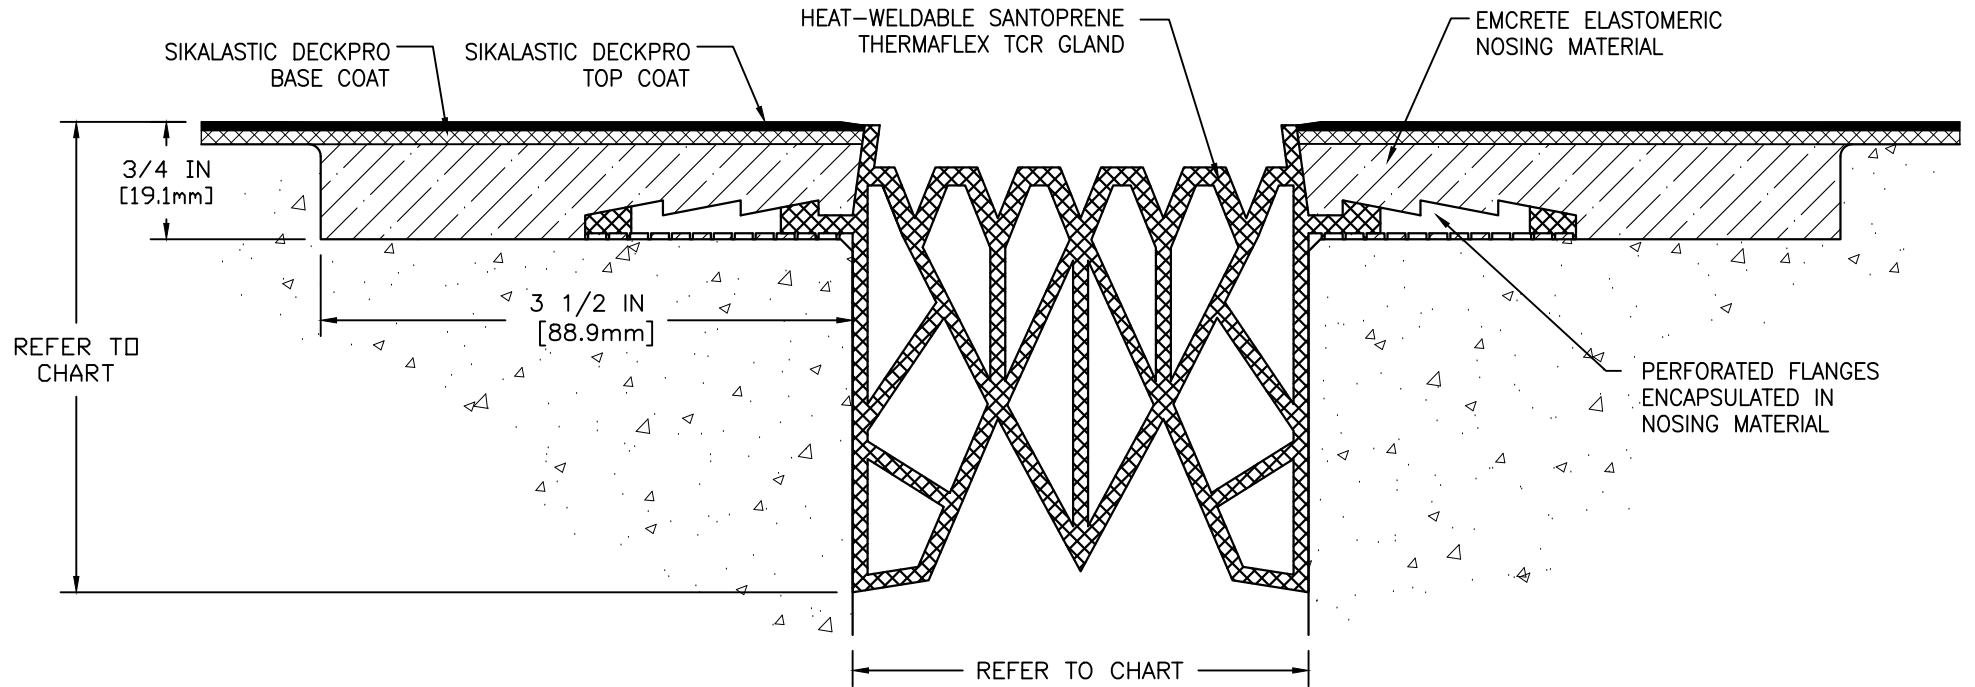

MATERIAL	JOINT GAP		INSTALLATION WIDTH			GLAND DEPTH
	MAX	MIN	MAX	PREFERRED	MIN	
TCR 300	3 IN	1 1/8 IN	2 3/4 IN	2 1/8 IN	1 7/8 IN	2 1/2 IN
TCR 400	4 IN	1 5/8 IN	3 3/4 IN	2 3/4 IN	2 1/4 IN	3 IN
TCR 500	5 IN	2 IN	4 3/4 IN	3 1/2 IN	3 IN	3 1/2 IN
TCR 600	6 IN	3 1/4 IN	5 1/2 IN	4 3/4 IN	4 1/2 IN	4 IN



A SIKA COMPANY

BUILDING TRUST



EMSEAL JOINT SYSTEMS LTD.

THERMAFLEX TCR DECK TO DECK – WITH SIKALASTIC DECKPRO – ALT2

THIS DOCUMENT CONTAINS INFORMATION OF A CONFIDENTIAL NATURE AND IS PROPRIETARY TO EMSEAL JOINT SYSTEMS LTD. ANY UNAUTHORIZED USE WILL BE PROSECUTED. THIS DRAWING IS PROTECTED BY COPYRIGHT, THE RIGHT TO REPRODUCE IN ANY FORM BEING THE EXCLUSIVE RIGHT OF EMSEAL JOINT SYSTEMS LTD. ANY UNAUTHORIZED REPRODUCTION WHETHER IN TWO OR THREE DIMENSIONS WILL BE PROSECUTED. © 2014 EMSEAL JOINT SYSTEMS LTD.

DRAWN BY: **PMG** DATE: **2019/03/06** SCALE: **N.T.S.** SHEET No: **1 OF 1**

PART NUMBER:

SES-014